



7A

To Set Up the Cost on the Remote Monitor

- Press SET key to Enter COST menu
- Press the MODE key to scroll and SET key to enter TAR1 sub-menu
- Press SET key to Enter TIME menu
- Press ADJUST key to scroll and SET key to set Tariff Start Time (HH:MM)
- Press SET key to Enter RATE menu
- Press ADJUST key to scroll and SET key to set tariff rate (10:55 PENCE)
- Press the SET key to enter PEAK menu
- Press ADJUST key to toggle and SET key to select as a peak time (YES / NO)




- Press SET key to enter ALM menu
- Press ADJUST key to toggle and SET key to enable/disable alarm (ON / OFF)
- Press ADJUST key to scroll and SET key to set alarm level (£02:00)
- Press MODE key to scroll and SET key to exit TAR1 sub-menu

7B

To Set Up Tariffs 2/3/4 on the Remote Monitor

- Press MODE key to scroll and SET Key to enter TAR2, TAR3 or TAR4 sub-menus
- Press ADJUST key to toggle and SET key to enable/disable tariff
- Follow concurrent steps in section 7A

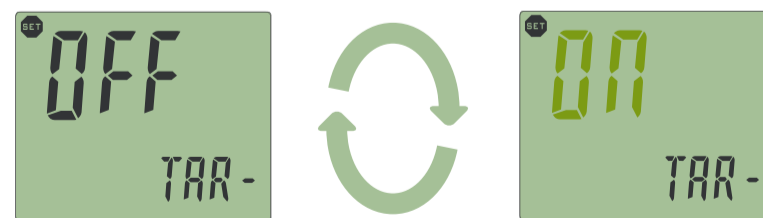

7C

To Set Up the Time on the Remote Monitor

- Press the SET key to enter TIME sub-menu
- Press ADJUST key to toggle and SET key to select 12/24 hour clock
- Press ADJUST key to toggle and SET key to set clock hours
- Press ADJUST key to toggle and SET key to set clock minutes



7D

To set up the Date on the Remote Monitor

- Press SET key to enter DATE sub-menu
- Press ADJUST key to toggle and SET key to select DD:MM or MM:DD date display
- Press ADJUST key to toggle and SET key to set Year
- Press ADJUST key to toggle and SET key to set Month
- Press ADJUST key to toggle and SET key to set Day

